

## BA 111 FITTING INSTRUCTIONS

### KIT CONTENTS

8 X M8 RIVNUTS

8 X M8 BOLTS & WASHERS

8 X M10 BOLTS & NUTS

16 X M10 WASHERS

4 X BRACKETS

1 X RIVNUT INSERTION PLATE

1


Locate pre drilled holes in chassis and fit rivnuts( procedure leaflet enclosed) attach brackets pictured right to chassis with M8 bolts and washers supplied.



2

Attach side steps to chassis bracket with M10 bolts nuts and washers supplied, Check alignment before fully tightening all fixings securely.

Front

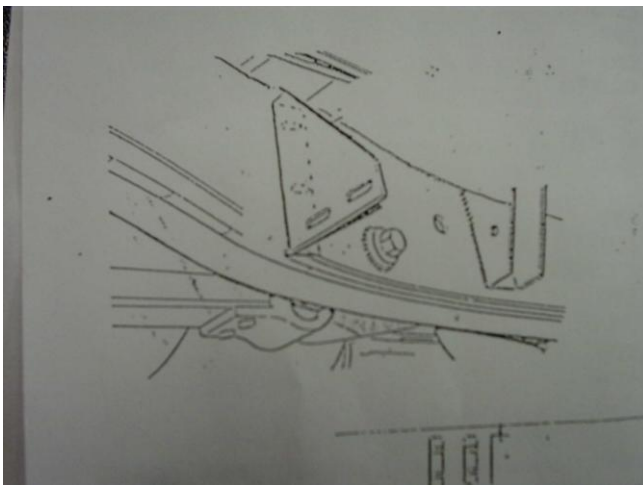

rear

