




Est. UK1958  
**Bearmach**  
LAND ROVER PARTS

## BA 122 Defender Lamp Guard Set Fitting Instructions.

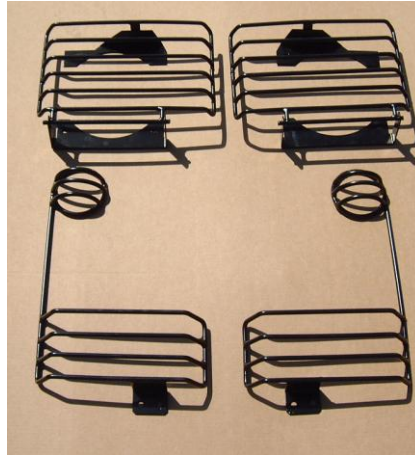

- 1 Remove the front plastic bezel from around the head light on the front of the vehicle.
- 2 On the inner wing there should be 4 small holes, two of which are used to attach the headlamp bezel you have just removed. The 4 holes will be needed to attach the lamp guards, so two extra holes will need to be drilled out, in the bezel and the plastic inserts pushed into the holes in the inner wing.
- 3 It is easiest if the lamp guards are disassembled for fitting. Fit the top and bottom lampguard brackets (not forgetting to replace the headlamp bezel) with the existing screws. Now mount the guard to the bracket. (Some bending of the brackets may be required). Repeat for opposite side.
- 4 The rear guards use the bolts on the rear cross member and the screws around the light. If the guards are held up to the vehicle it can be seen what fixings are to be used. (Please note that one hole may need to be drilled on each side of some vehicles).